PS4™

PS4 Interactives Access Instructions

PS4-73 Freestanding Kiosk

Tools Required: Interactive Key **(C642A)**

Keyholes are located under each side car. Using the C642A key, unlock both locks

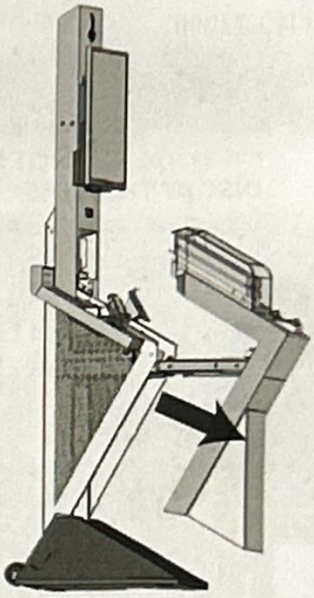

After unlocking kiosk, pull the front drawer to access internal components

If you encounter any issues, please call Retail Interactive Support at 1-800-788-7669

The "PS" Family logo and is a registered trademark and the "PS4" logo is a trademark of Sony Computer Entertainment Inc.

△○×□

T11242

PS4™

Summer 2014 Refresh

PS4-73 Update Instructions

This Update Disc contains a 1.71 firmware update as well as new demos and videos.
This is an automatic update that does not require a PlayStation Rep for installation.

For **RETAILER** and **MERCHANDISER** Use ONLY

A. Preparation:

1. Ensure that you are using the update disc shown to the right.
2. Open the PS4 display to access the console. **DO NOT INSERT DISC AT THIS TIME.**
3. Unplug the network LAN cable from the rear of the PS4 console.

LAN Cable

PS4 IDU Update Disc

B. System Software Update (Auto):

1. Ensure the PS4 has completely loaded to the OMSK menu.

2. Check that you have the correct update disc (see above). Insert the update disc into the PS4.

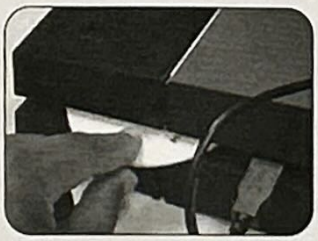

3. The screen below is shown while System Software 1.71 updates automatically. The PS4 will reset during the install. The process takes 8 minutes to complete.

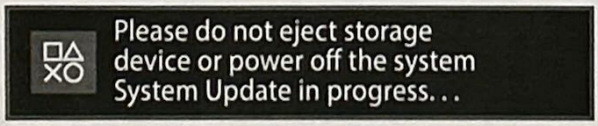

4. The PS4 will load to OMSK menu when done.

C. Content Update

1. Content Update begins automatically. If the Assets message shown below does not appear on the upper-right of the screen after 1 minute, eject and reinsert the disc.

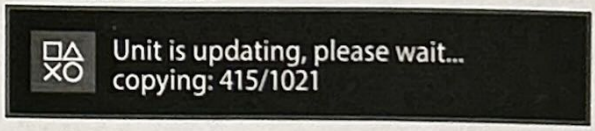

2. Progress is displayed on screen. Assets (pictures, videos) install first, then demos. The entire process takes roughly 60 minutes but may vary.

3. If prompted, press the PS button, then hold the UP button to expand the screen view. Press X.

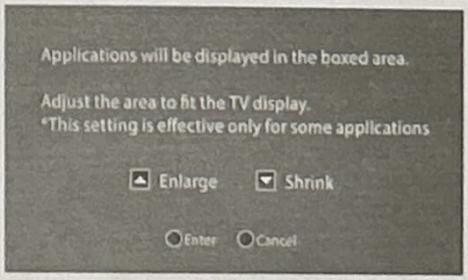
Applications will be displayed in the boxed area.
Adjust the area to fit the TV display.
*This setting is effective only for some applications
Enlarge
Shrink
Enter
Cancel

If you encounter problems installing this update disc, please call Retail Interactive Support at 1-800-788-7669

The "PS" Family logo and is a registered trademark and the "PS4" logo is a trademark of Sony Computer Entertainment Inc.

△○×□

T11242

PS4™

Summer 2014 Refresh

PS4-73 Update Instructions

Perform steps on page 1 before proceeding with the following

4. Content is installed when the PS4 returns to OMSK product view.

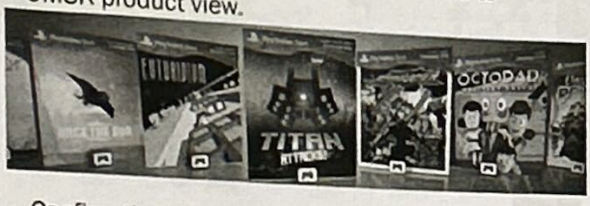

5. Confirm that the following titles are installed under "Try A Game":
   - FEZ
   - FIFA 14
   - Futuridium EP Deluxe
   - Guacamelee! Super Turbo Championship Edition
   - Knack
   - LEGO Marvel Super Heroes
   - LEGO Movie Videogame
   - LEGO The Hobbit
   - Octodad: Dadliest Catch
   - Race The Sun
   - Resogun Heroes
   - Strider
   - Tiny Brains
   - Titan Attacks
   - UFC

6. Press and hold L1+R1+L2+R2+O+Left until version shows on the left side of the screen. Confirm that the Version shown is 2.04.01

7. Remove disc from the PS4. PS4 IDU Spring Update Complete.

Perform steps below ONLY if either Sections B or C did not complete.

System Software Update (Manual):

1. Power off the PS4 by holding down the power button until PS4 beeps twice. The PS4 is off when center light stops flashing.

PS4 Power Button

2. Restart the PS4 into Safe Mode by holding down the power button until the PS4 beeps twice.

3. Press the PS Button when prompted.



4. Select "3. Update System Software." Press X.

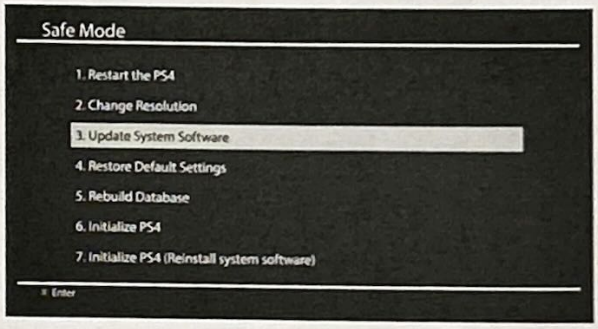

5. Select "2. Update from disc." Press X. Insert disc.

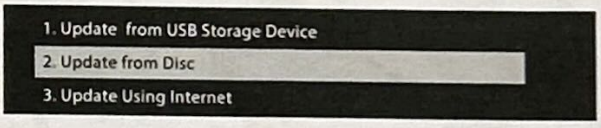

6. Follow on-screen messages to select "OK" or press X when prompted.



7. System Software 1.71 installs within 8 minutes. The screen will turn completely black three times during the proccess.

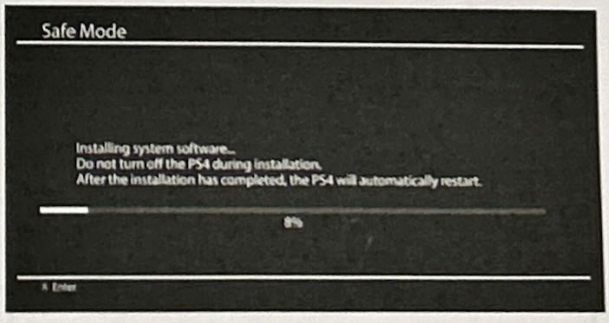
Safe Mode
Installing system software...
Do not turn off the PS4 during installation.
After the installation has completed, the PS4 will automatically restart.
8%
Enter

8. The PS4 will load to OMSK menu when done.

If you encounter problems installing this update disc, please call Retail Interactive Support at 1-800-788-7669

The "PS" Family logo and is a registered trademark and the "PS4" logo is a trademark of Sony Computer Entertainment Inc.

△○×□

T11242

PSVITA

Summer 2014 Refresh

VITA Update Instructions

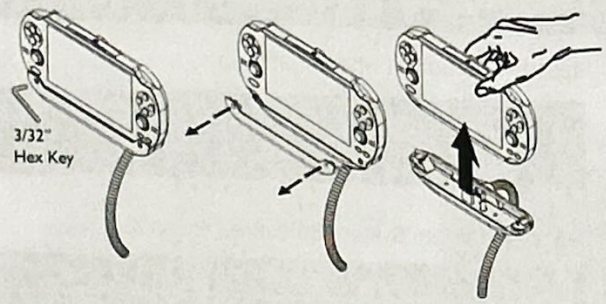

1. Remove the Vita unit from the security cable by unscrewing the 2 screws indicated above using a (3/32") Hex Key. Detach the front plate as shown. Grasp the top of the Vita console and gently pull from the security cable's clamp as shown.

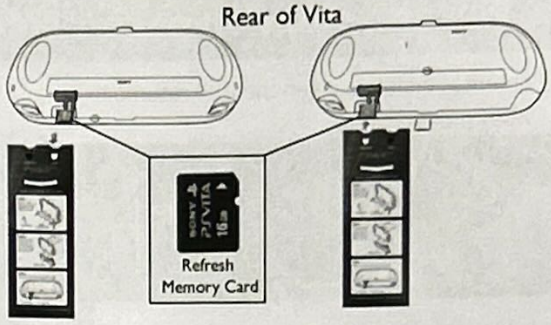

2. Lift up the flap covering the Vita's memory card port. Push to remove the old stick and place it into the right side of the mailer. Remove the left memory card from the mailer and insert it into the Vita. Close the flap.

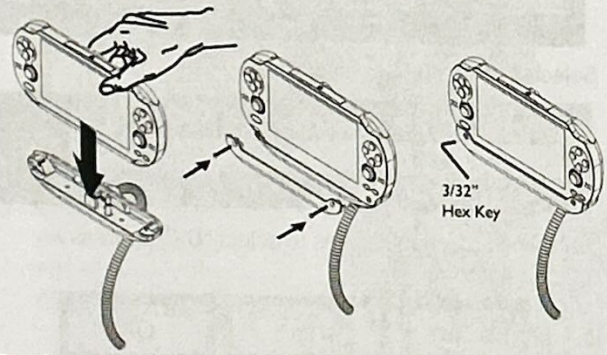

3. Insert the Vita console into the clamp as shown, ensuring the USB and audio plugs are inserted into the Vita. With the Vita attached to the new security cable, attach the front plate then secure with the provided screws.

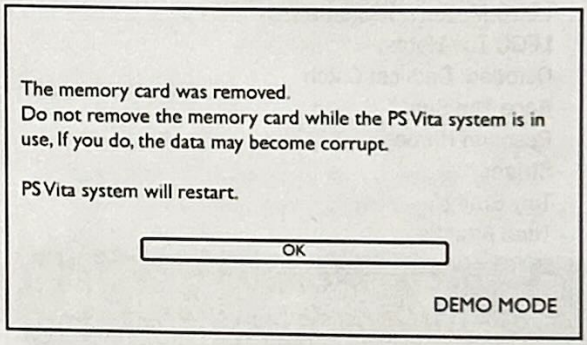
The memory card was removed.
Do not remove the memory card while the PS Vita system is in use, If you do, the data may become corrupt.
PS Vita system will restart.
OK
DEMO MODE

4. Touch the "OK" button on screen. The PS Vita console will restart itself. Touch the "OK" button on any subsequent prompts until the Vita begins rebuliding its database.

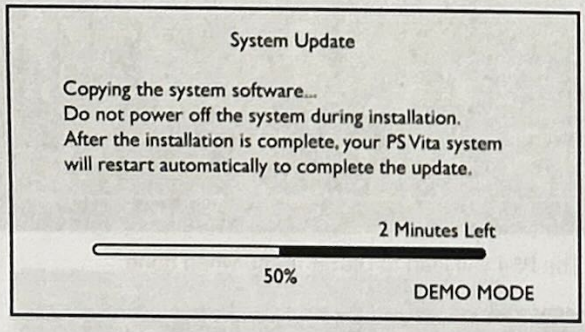
System Update
Copying the system software...
Do not power off the system during installation.
After the installation is complete, your PS Vita system will restart automatically to complete the update.
2 Minutes Left
50%
DEMO MODE

5. Once the Vita finishes rebuilding its databse, you will be prompted with the System Update copy screen. The System Update will copy to the Vita, and the file transfer takes 1-3 minutes to complete.

6. After the update completes, the Vita will restart and display the screen above. Ensure that the Vita's screen matches the image above.

If you encounter problems installing the Vita content update, please call Retail Interactive Support at 1-800-788-7669

The "PS" Family logo is a registered trademark and the "PSVITA" logo is a trademark of Sony Computer Entertainment Inc.

△○×□

T11242

PS VITA

Summer 2014 Refresh

VITA Update Instructions

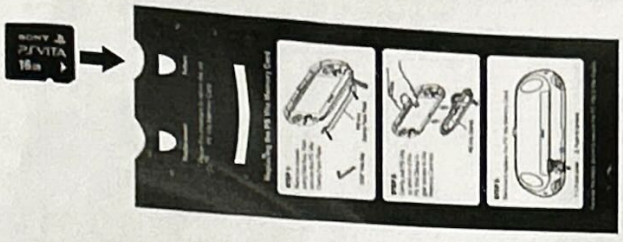

7. Make sure the original memory card has been placed in the "Return" side of the memory card mailer.

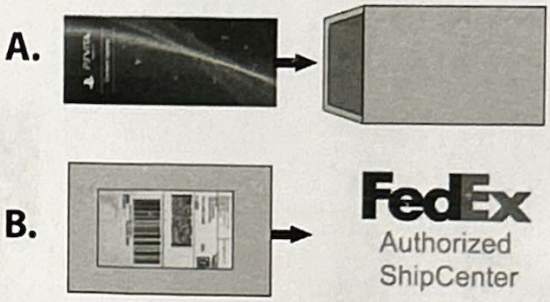

8. (A) Insert memory card mailer into the yellow padded envelope and seal.
   (B) Attached return airbill to yellow padded envelope. Take the yellow envelope to the nearest FedEx drop-off location to complete the return.

List of Playable Demos:

PlayStation Vita Pets
Tearaway
Fez
Metrico
CastleStorm
Spelunky
BIT.TRIP 2. Presents Runner 2
Guacamelee
Sound Shapes

List of Videos:

Axiom Verge
BIT.TRIP Presents Runner 2
Boarderlands 2
BOSS
CastleStorm
Child Of Light
Cosmic Star Heroine
CounterSpy
Danganronpa 2
Destiny of Spirits
Disgaea 4
FEZ
Final Fantasy X|X-2 HD
Fly Hunter Origins
Forma.8
Freedom Wars
Futuridium EP Deluxe
Gravity Crash Ultra
Guacamelee!
Hohokum
Home
Killzone Mercenary
La-Mulana
LEGO Marvel Super Heroes
Lemmings Touch
Metrico
One Way Trip
Paint Runners
Pavilion
PlayStation Vita Pets
Race The Sun
Reaper
Road Not Taken
Rogue Legacy
Shantae Half Genie Hero
Sound Shapes
Stick It To The Man
Switch Galaxy Ultra
Tearaway
The Sly Cooper Collection